



ALPHA PROGRAMMING INSTRUCTIONS


REV: 2022-06-29

The instructions below show a Navigator Single Channel Remote but it's the same process for all Alpha remotes. On multi-channel remotes, before programming use the channel selection button to select the channel you'd like to use with the motor.


A "motor jog"  is a little jiggle the motor gives to say it has accepted the programming command it received (or was just plugged in).

REMOTE PAIRING


Only works for the first remote assigned to a motor.

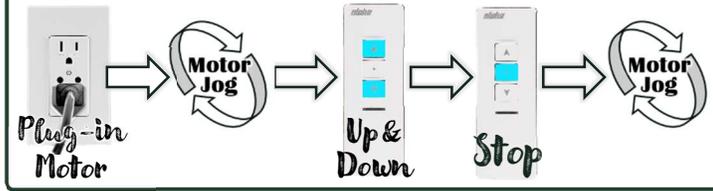


REMOTE PAIRING

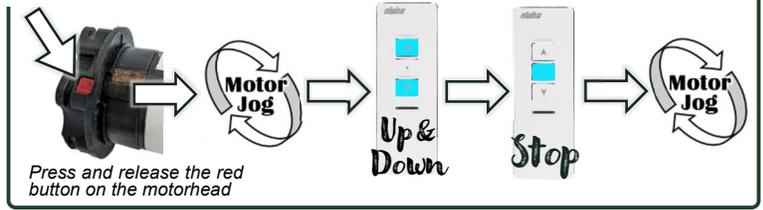


SWAP MOTOR DIRECTION

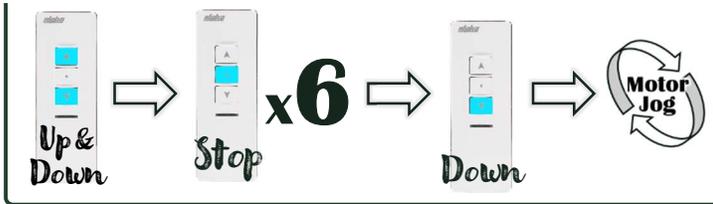


OR

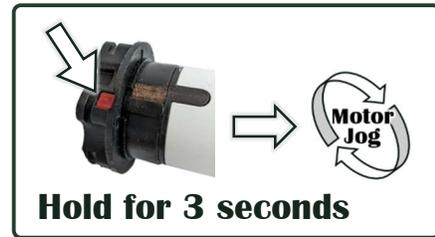


ENTER "STEP" MODE

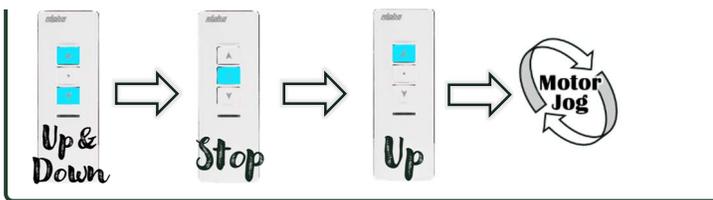


LEAVE "STEP" MODE

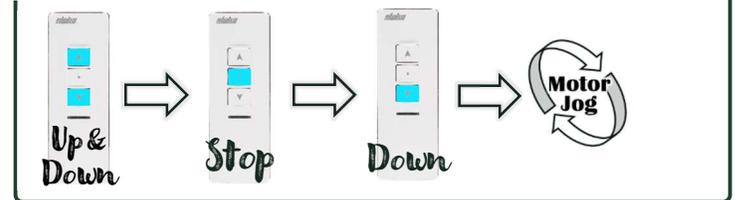


SET UPPER LIMIT

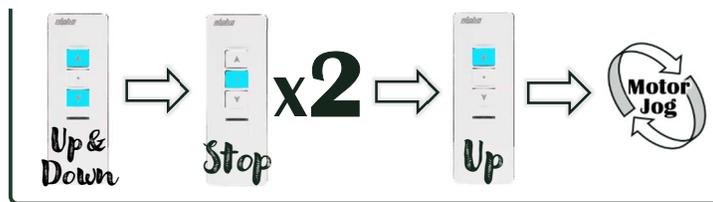

SET LOWER LIMIT

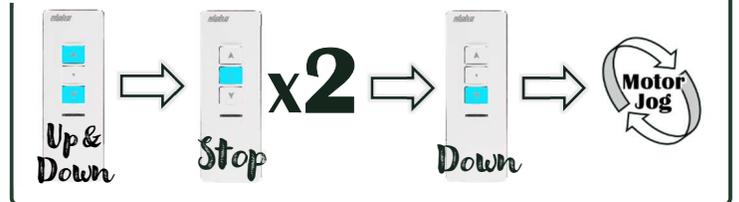


DELETE UPPER LIMIT

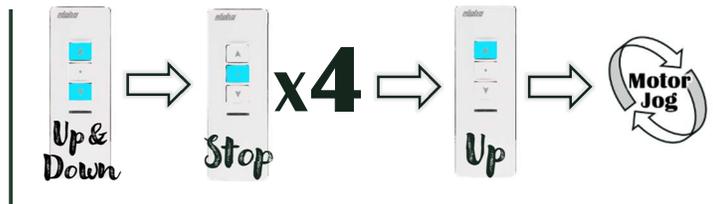

DELETE LOWER LIMIT



DELETE REMOTE

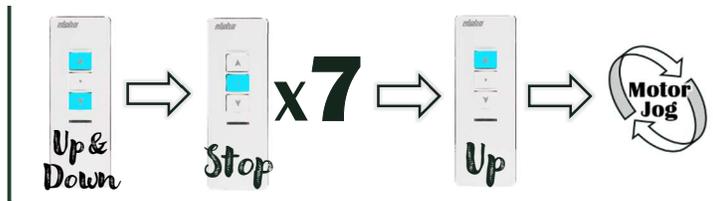

DELETE ALL REMOTES

